




LEAK REPAIR - LEVEL 2 (PRESSURIZED)

Wrap Steel Ultra - Quick Repair Kit For Active Pipe Leaks

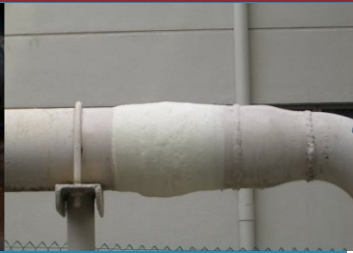

- “
- No shutdown required
 - Repairs leak in 30 minutes
 - Applicable to pipes up to 18" (457 mm) diameter
 - Repairs under active leak up to 150 psi (11kg/cm²) pressure
 - Withstand pressure up to 500 psi (35 kg/cm²)
 - Fiberglass Bandage withstands temperatures up to 200°C (392°F)
 - Epoxy stick withstands temperatures up to 120°C
 - Calculated under ASME PCC2

KIT

- 1 Roll of Fiberglass Tape
- 1 Roll of Self Fusing Tape
- 1 Unit of Epoxy Stick Quick Cure
- 1 Pair of latex gloves

PRODUCT SELECTION GUIDE

THE COLOR INDICATES THE SIZE OF THE TAPE ROLL


Fiberglass Tape	Ultra Tape	Product Code
2"x 12' (50mm x 3.6m)	1"x 16' (25mm x 5m)	WSU-0212
4"x 12' (100mm x 3.6m)	2"x 16' (50mm x 5m)	WSU-0412
4"x 25' (100mm x 7.6m)	2"x 16' (50mm x 5m)	WSU-0425

Pipe Diameter	Number of Rolls Required		
	50 psi 4 Kg/cm ² 10 layers	150 psi 11 Kg/cm ² 15 layers	400 psi 28 Kg/cm ² 20 layers
1/2"	1	1	1
3/4"	1	1	1
1"	1	1	1
1 1/4"	1	1	1
1 1/2"	1	1	1
2"	1	1	1
2 1/2"	1	1	1
3"	1	1	1
4"	1	1	1

Pipe Diameter	Number of Rolls Required		
	50 psi 4 Kg/cm ² 10 layers	150 psi 11 Kg/cm ² 15 layers	400 psi 28 Kg/cm ² 20 layers
5"	1	1	2
6"	1	2	3
8"	2	3	4
10"	3	4	6
12"	4	5	8
14"	2	3	4
16"	3	4	5
18"	3	4	5
>18"	Consult		

APPLICATION PROCEDURE


1 Surface Preparation

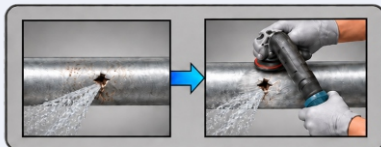

Minimize the flow rate and reduce system pressure

Roughen the area to be repaired

2 Stop the Leak

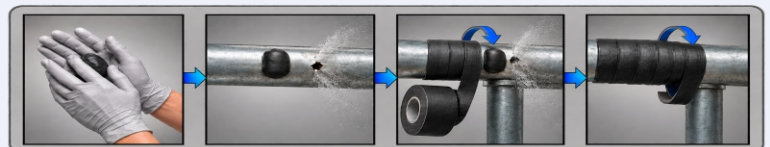


Knead the Epoxy Stick

Place the Epoxy Stick away from the leak location

Start wrapping the Self Fusing Tape a few distance away from the leak location

Continue to wrap the Self Fusing Tape onto pipe while pushing the Epoxy Stick onto leak location

3 Reinforce Leak Area

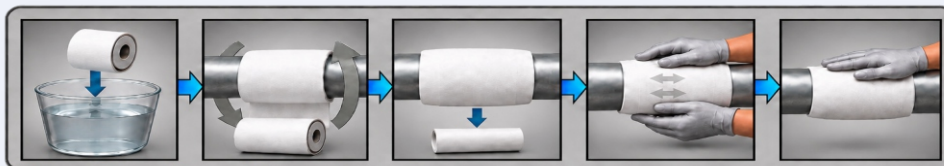

Immerse Wrap Steel Fiberglass Tape into water

Wrap the Wrap Steel Fiberglass Tape above the repair area as tightly and evenly as possible, using the entire roll

Discard the plastic tube at the end of the roll

Wet gloves in water and quickly compress the bubbling resins back into the fiberglass wrap until all bubbling has stopped

Repair completed with smooth and hard ivory appearance



PIPE
REPAIR